


Wok adapter accessory


The wok stand fits over the dual burner.

Please see the instructions below:

1. Turn off all the burners and waiting until the grids completely cool down;
2. Place the wok reduction on either side grids;
3. Put a wok in a wok reduction. Make sure that the wok settles on the wok reduction;
4. Turn on the burner, and adjust the flame level as appropriate;

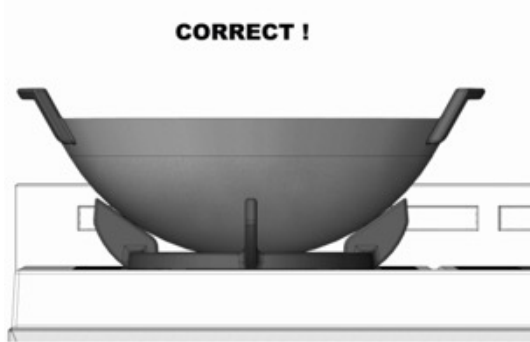

CORRECT POSITION ON THE COOKTOP!

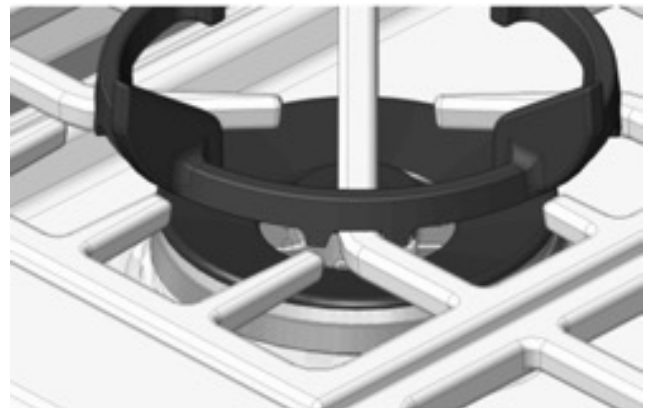

WARNING

- ⚠ Using a wok without the stand may cause the wok to tip or the wok or dual burner to operate incorrectly.
- ⚠ Do not use the stand for ordinary, flat-bottomed saucepans.
- ⚠ The wok stand **MUST BE PLACED ONLY** over the trivet for Dual burner.
- ⚠ The cooktop becomes very hot during operation. Keep children well out of reach.
- ⚠ Do not remove the wok reduction until the cooktop grids, surface and wok reduction are completely cool down.
- ⚠ When you use the wok reduction with the cooktop, the reduction wok may become very hot. Use oven gloves when placing or removing the reduction wok.
- ⚠ The wok grated provided can support 12-14 inch pan or pot.