FORZA

Grates cover accessory

IMPORTANT SAFETY INSTRUCTIONS

 $\overline{\mathbb{A}}$

Before using the grate cover, remove the packaging and the film. BOTH KEEP OUT OF REACH OF CHILDREN!



Danger of burning! Place the cover in position only after the burners has been turned off and the grates cooled down.



If the cover is used to keep a cook top from becoming soiled, do not place it in position until the cook top has cooled down. Do not turn on the cook top while the cover is in place. The cook top could be damaged by accumulation of heat. IT IS NOT A GRILL!



Do not store items on the cover.



If soiling, especially oil and grease, is left for any length of time, it could burn on and become impossible to remove. Remove soiling immediately.



DO NOT PLACE THE GRATE COVER OVER THE LIT BURNERS.

USE

The cover is not secured in place.

· Place the cover in position with the lettering facing the front.

To remove the grate cover proceed as follows:

1) With your fingertips lift the front part of the grate cover



2) With both hands, take the long side of the grate cover. Do not run your hands along the edges!



3) Bringing up the rear.



www.forzacucina.com

FORZA

Below is a table with the possible arrangements of the grate cover with the simultaneous use of the burners:

Range or RangeTop

30"





Range or RangeTop

36"







Range

48"



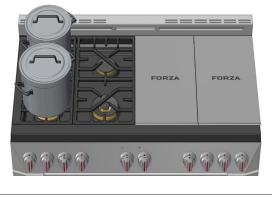

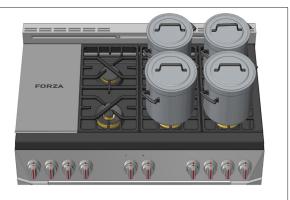






WARNING

Do not place the grate cover next to two lit burners (see the picture).

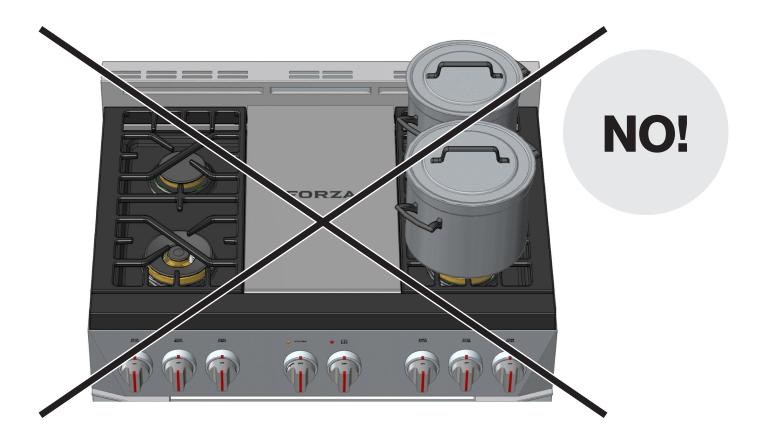

MAINTENANCE

Do not use commercial cleaning agents. Only use agents designed for domestic use.

- Clean the cover with a soft sponge and a solution of warm water and liquid dish soap. A clean, damp microfiber cloth without cleaning agent can also be used.
- After cleaning, wipe the cover dry using a soft cloth.